 
 
Hinge Adjustments, Inset Cup Hinge

 
Side Adjustment




Turn front screw clockwise to increase door gap between butt doors, counter-clockwise to decrease. Range = $\frac{3}{32}$ "




Height Adjustment




Rotate center cam screw. Adjust door to position and tighten screw. Range = $\frac{5}{32}$ "

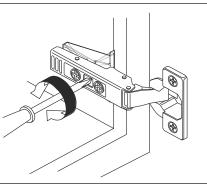

Depth Adjustment

 

 Turn rear cam screw counter-clockwise to increase door gap, clockwise to decrease. Range = $\frac{3}{16}$ "



J

Door Removal & Install

Release the lever under the hinge arm to remove.

To reinstall, place hinge on the mounting plate and push back with finger pressure.The click sound confirms a secure attachment.